

Thule Adapters - Fit Guide

Before installation

- The installation of the adapter must be carried out by a qualified person
- In case you want to install a tent or a panel, make sure that the adapter is well positioned taking the windows, garage and door opening into account
- Check if you have a solid back ground for the installation of the awning adapter
- The adapter must support the awning at the awnings spring arms for a correct and stable mounting. When this is not possible use a full length adapter
- In order to get a watertight installation, use acid free silicone to fill up the drilled holes
- Always read the installation instructions carefully

Select the right adapter

1 Vehicle type



☐ Motorhome



☐ Caravan



☐ Van



☐ Minivan

2 Vehicle brand

Model & Year

2 Select the mounting location and awning type

☐ Wall mounting

- Most common installation
- Flat adapter mostly included

☐ Roof mounting

- On top of the vehicle: more space under the awning
- Better integrated design
- Alternative in case of lack of space or width restrictions
- Caravan rail remains free


☐ Rail mounting

- TO 1200:
- Easy installation without adapter
 - Not permanent


3 Is there an adapter with brand name available (manufacturer adapter)? If not: choose from the universal adapter range

4 Free space:

On the roof: Only count the straight space between roof curves for the installation of the adapters

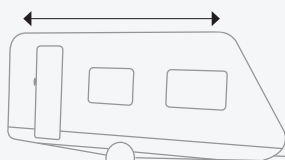

On the wall: Avoid lights and ventilation caps. Make sure the door can open under an opened awning

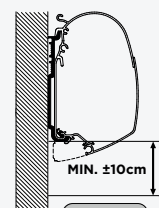


Adapters for wall-mounted awnings

UNIVERSAL


Caravan Rail Luxe

307922 6.00 m: 10 pcs

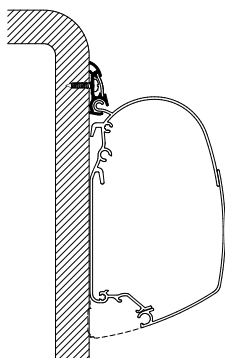


Thule Omnistor: 5200 / 8000 / 2000 / 1200

Caravan Rail

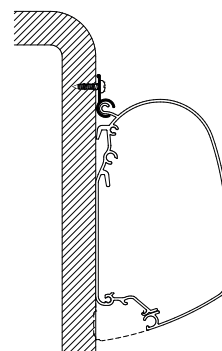 307899 3.00 m: 20 pcs
 307908 6.00 m: 20 pcs


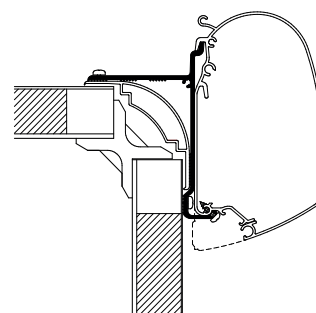
Thule Omnistor: 5200 / 8000 / 2000 / 1200

Flat Adapter

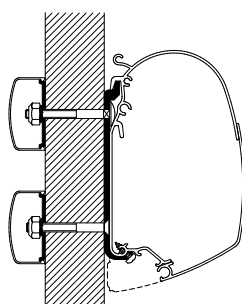 307915 40 cm: 5 pcs
 307909 75 cm: 5 pcs
 308040 3.00 m
 308041 3.50 m
 308042 4.00 m
 308043 4.50 m
 308044 5.00 m
 308046 6.00 m


Thule Omnistor: 5200 / 8000 / 4900


High-Top Adapter

 308005 Set: 1x 8 cm + 2x 30 cm
 308008 3.00 m
 308012 4.00 m
 309960 4.50 m
 309961 5.50 m


Thule Omnistor: 5200 / 8000 / 4900

Omni Wall


307905 Set: 2x 8 cm + 1x 4 cm

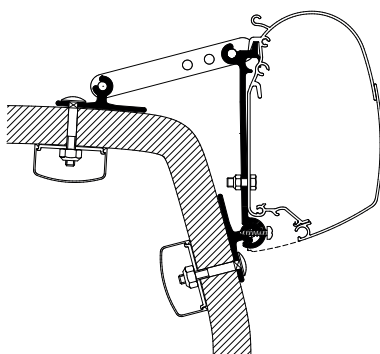

Thule Omnistor: 5200 / 4900 / 2000

Omni Roof

307910 Set: 3x 8 cm

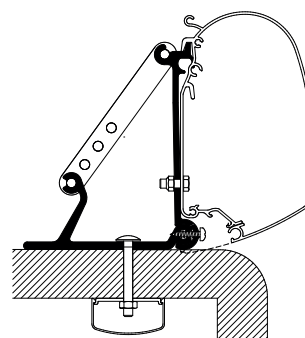


Thule Omnistor: 5200 / 4900 / 2000

Adapters for wall-mounted awnings

UNIVERSAL

Omni Auto

307912 Set: 2x 8 cm

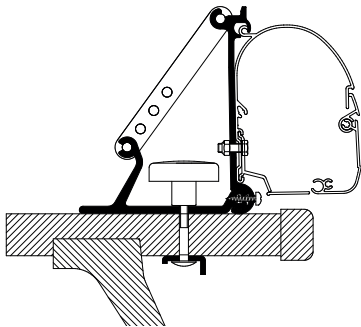


Thule Omnistor: 5200 / 8000 / 2000



Rail Bracket

309854 4.00 m: 10 pcs
309855 4.50 m: 10 pcs

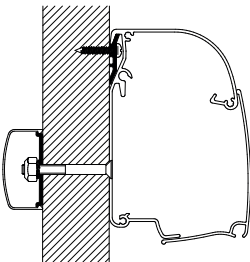


Thule Omnistor: 5200 / 8000 / 4900

Adapters for wall-mounted awnings

MANUFACTURER

Adria Coral


308007 Set: 2x 30 cm + 2x 8 cm

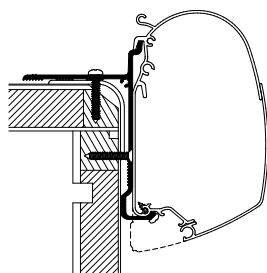

Thule Omnistor: 5200 / 8000 / 4900

Bürstner Adapter 2017

301680 Set: 2x 40 cm + 2x 8 cm

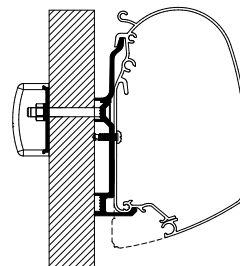


Thule Omnistor: 5200

Bürstner Adapter



308025 Set: 2x 35 cm + 1x 8 cm
 308027 3.00 m
 308028 3.50 m
 308029 4.00 m
 308030 4.50 m
 308031 5.00 m
 308032 5.50 m

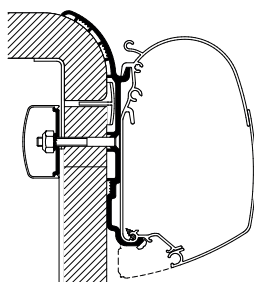


Thule Omnistor: 5200 / 8000 / 4900

Bürstner Ixeo



309978 Model T680 - 4.00 m
 309979 Model T728/734 - 4.50 m
 + Dethleffs 4-Travel

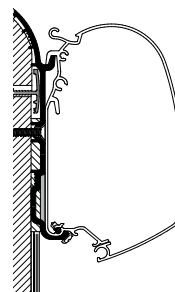


Thule Omnistor: 5200 / 8000 / 4900

Carado | Sunlight



309983 Set: 1x 17.5 cm + 1x 4 cm + 1x 40 cm

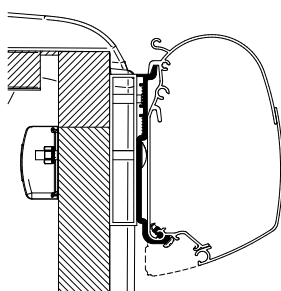


Thule Omnistor: 5200 / 8000 / 4900

Dethleffs Globebus



308934 Set: 2x 4 cm + 2x 17.5 cm - TO 5200 (4.00 m)
 308004 Set: 2x 8 cm + 2x 40 cm - TO 8000 (4.00 m - 6.00 m)
 308002 3.00 m
 308003 3.50 m

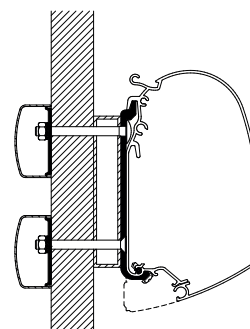


Thule Omnistor: 5200 / 8000 / 4900

Adapters for wall-mounted awnings

MANUFACTURER

Eriba Touring ≤ 2007

307882 Set: 3x 4 cm

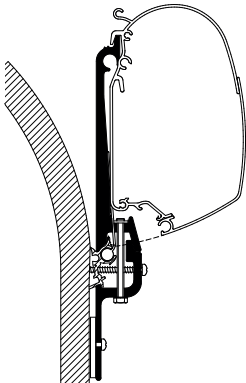


Thule Omnistor: 5200 / 4900 / 2000

Eden | Allegro < 2010



307919 Set: 1x 70 cm + 1x 30 cm + 1x 8 cm
308022 3.50 m
308023 4.00 m

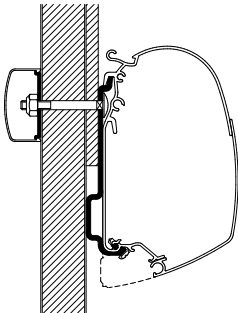


Thule Omnistor: 5200 / 8000 / 4900

Eden | Allegro | Trigano > 2010



308764 Set: 3x 50 cm

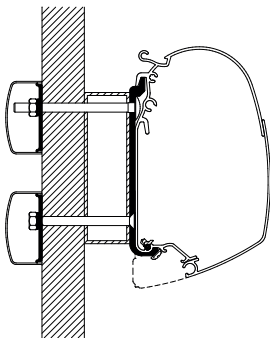


Thule Omnistor: 5200 / 8000 / 4900

Hobby Optima Ontour



301905 Set: 2x 8 cm + 2x 40cm

New

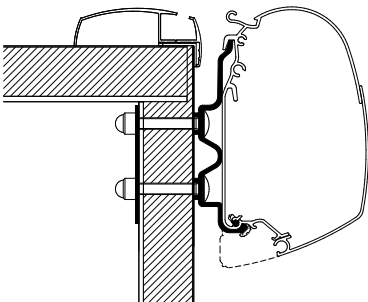


Thule Omnistor: 5200 (3.50 m - 4.00 m)

Hymer Car 302 - Ducato H1



308659 Set: 2x 12 cm

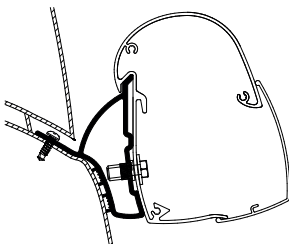


Thule Omnistor: 5102

Hymer 2016



309985 2.60 m
309986 3.00 m
309987 3.50 m
309988 4.00 m
309989 4.50 m
309990 5.00 m
309991 5.50 m
309992 6.00 m
≥ 2012

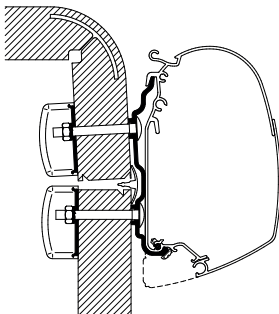


Thule Omnistor: 5200 / 8000 / 4900

Adapters for wall-mounted awnings

MANUFACTURER

Hymercamp ≤ 2011


307933 3.00 m
 307944 3.50 m
 307957 4.00 m
 307965 4.50 m
 307971 5.00 m
 307976 5.50 m
 308686 6.00 m
 + Rapido

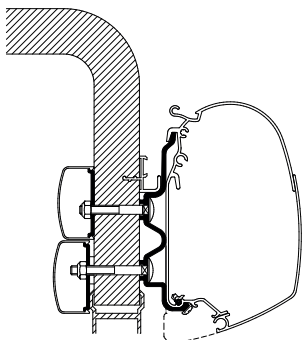

Thule Omnistor: 5200 / 8000 / 4900

Hymer SX


308017 4.00 m

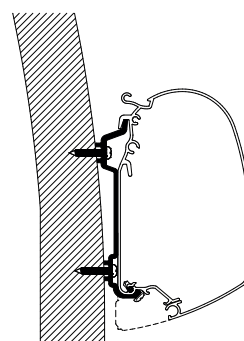

Thule Omnistor: 5200 / 8000 / 4900

Hymer B2 - Van


307932 3.00 m
 307943 3.50 m
 307956 4.00 m
 307964 4.50 m
 307970 5.00 m
 307975 5.50 m
 307978 6.00 m
 + Eriba Motorhome 2009

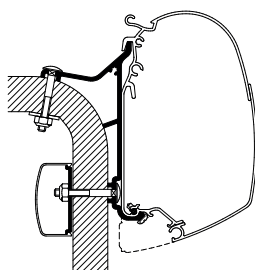

Thule Omnistor: 5200 / 8000 / 4900

Knaus Adapter 2017

301681 Set: 2x 17.5 cm + 2x 4 cm

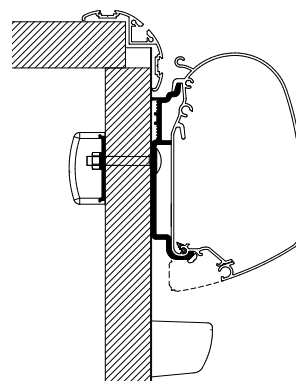


Thule Omnistor: 5200

Knaus Deseo Adapter 2019

301900 3.50 m


New

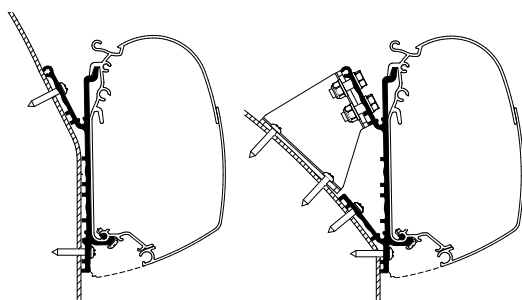

Thule Omnistor: 5200

Laika Ecovip - Rexosline

308047 Set: 2x 30 cm
 308049 4.50 m

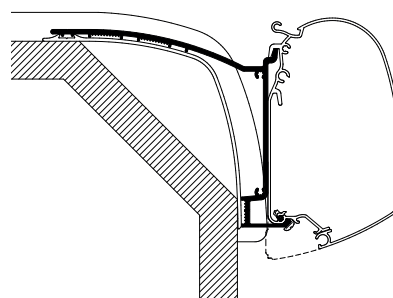


Thule Omnistor: 5200 / 8000 / 4900

Adapters for wall-mounted awnings

MANUFACTURER

Laika X


308297 Set: 3x 17.5 cm

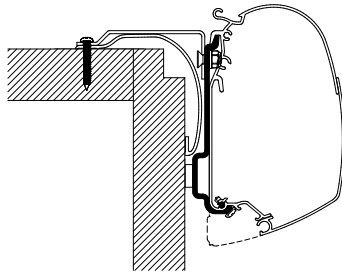

Thule Omnistor: 5200 / 4900

Pilote Explorateur


308006 Set: 2x 8 cm + 2x 40 cm
308014 4.00 m

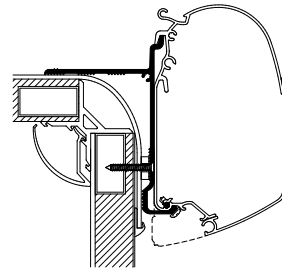

Thule Omnistor: 5200 / 8000 / 4900

Rapido Club ≥ 1995


307890 Set: 3x 8 cm

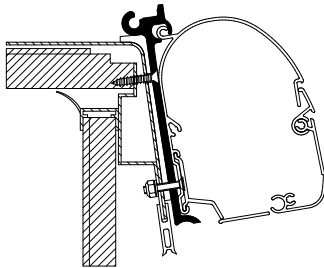

Thule Omnistor: 2000

Rapido Serie


307923 Set: 2x 18 cm + 1x 1 m (Serie 7)
307911 Set: 2x 18 cm + 2x 8 cm (Serie 9)
307931 3.00 m
307942 3.50 m
307955 4.00 m
308854 5.00 m

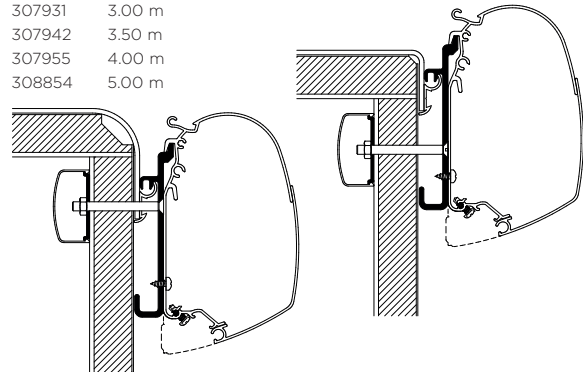

Thule Omnistor: 5200 / 8000 / 4900

Swift Rio

307028 Set: 1x 17.5 cm + 1x 4 cm + 1x 40 cm

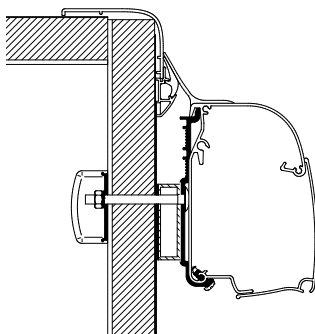


Thule Omnistor: 5200 / 4900

Adapters for wall-mounted awnings

VAN

Ducato | Jumper | Boxer ≤ 2006


307913 Set: 3x 8 cm

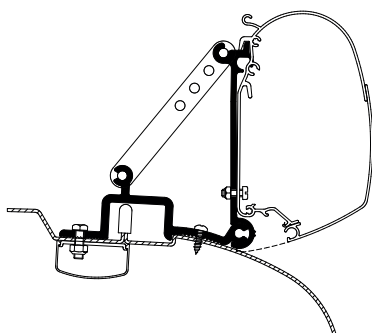

Thule Omnistor: 5200 / 4900

Ducato | Iveco H2 Lift Roof


308960 Set: 3x 17.5 cm

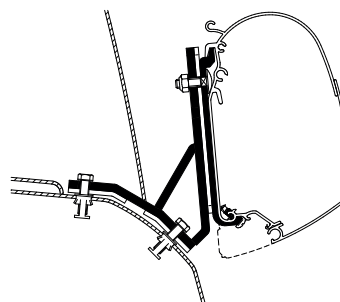

Thule Omnistor: 5200 / 4900

Ducato H3 + EPDM


309999 Set: 2x 50 cm + 1x 10 cm

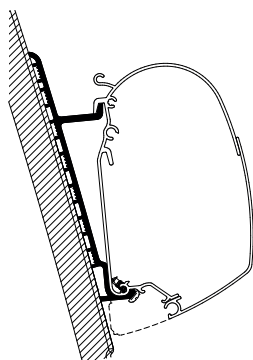

Thule Omnistor: 5200 / 4900

Ford Transit High Roof


307999 Set: 2x 50 cm + 1x 50 cm

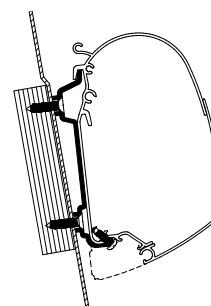

Thule Omnistor: 5200 / 8000 / 4900

Renault Master 1998-2010


307918 Set: 3x 8 cm

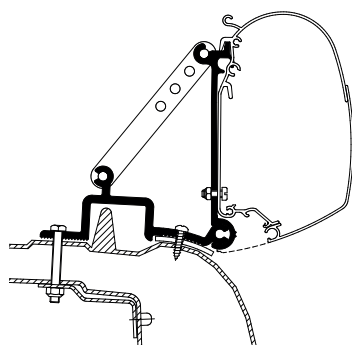

Thule Omnistor: 5200 / 8000 / 4900 / 2000

Renault Master High Roof H3

308072 Set: 2x 50 cm

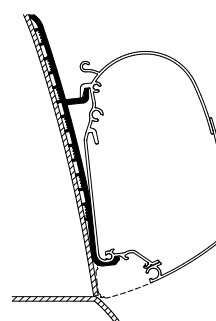

Thule Omnistor: 5200 / 8000 / 4900


Adapters for wall-mounted awnings

MINIVAN

Renault Trafic | Opel Vivaro 2015-2019 | Nissan Primastar



307996 Set: 2x 50 cm

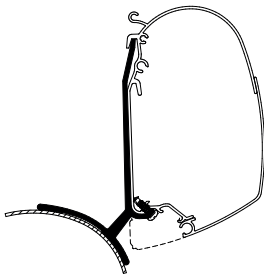


Thule Omnistor: 5200 / 4900

VW T2 & T3



307880 Set: 2x 8 cm + 1x 4 cm

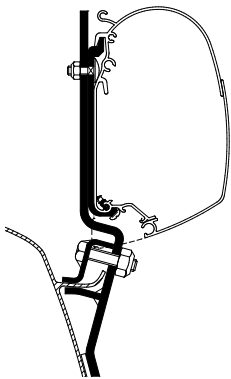


Thule Omnistor: 5200 / 4900

VW T4



307879 Set: 2x 8 cm

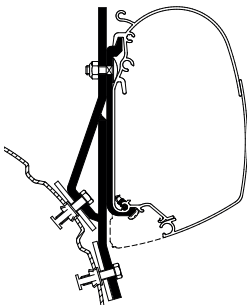


Thule Omnistor: 5200 / 4900

VW T4 Lift Roof



307887 Set: 2x 8 cm

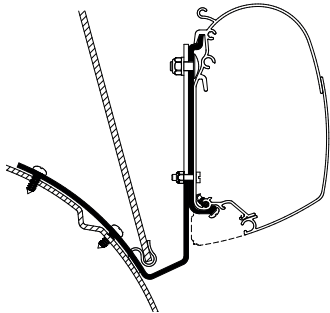


Thule Omnistor: 5200 / 4900

VW T5/T6 Brandrup Rail



307886 Set: 2x 8 cm

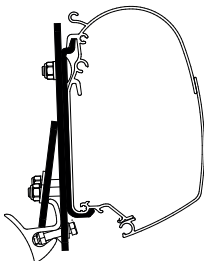


Thule Omnistor: 5200 / 4900 / 2000

Van



307884 Set: 1x 4 cm + 2x 8 cm

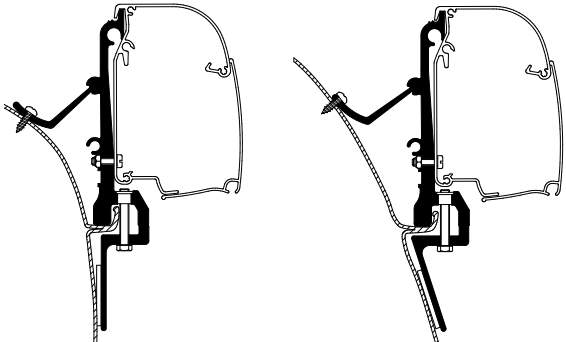


Thule Omnistor: 5200 / 4900 / 2000

Adapters for wall-mounted awnings

MINIVAN

Westfalia Adapter


308426 Set: 3x 8 cm

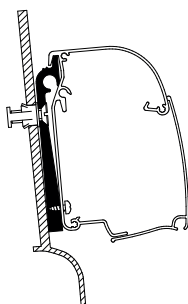

Thule Omnistor: 5200 / 4900

Westfalia Nugget High Roof


309984 Set: 2x 12 cm

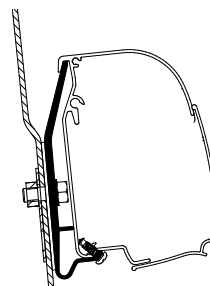

Thule Omnistor: 4900 (2.60 m)

Hymer Car 302 - Ducato H1

308659 Set: 2x 12 cm

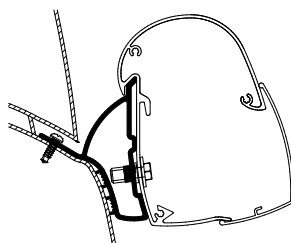


Thule Omnistor: 5102

Adapters for wall-mounted awnings

MINIVAN + THULE 3200

Flat Wall

301924

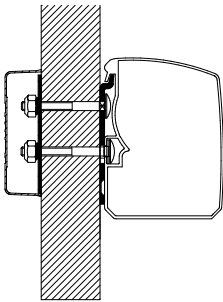


Thule 3200



New

Roof Rack

301925

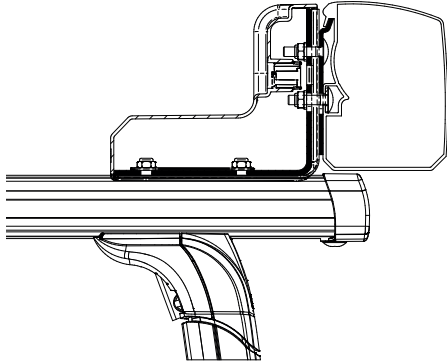


Thule 3200



New

VW T5/T6 Minivan

301912 LHD (EU)
301913 RHD (UK)

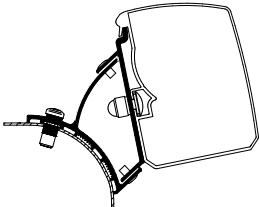


Thule 3200



New

VW T5/T6 Minivan Reimo Multi Rail

301914 LHD (EU) - Short wheelbase
301915 RHD (UK) - Short wheelbase
301933 LHD (EU) - Long wheelbase
301934 RHD (UK) - Long wheelbase

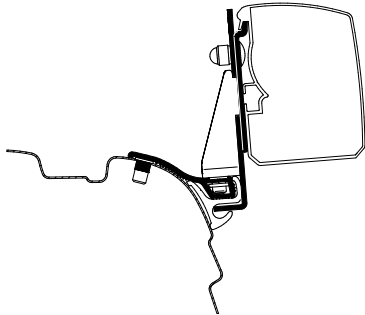


Thule 3200



New

VW T5/T6 Minivan Brandrup Top Rail

301916 LHD (EU) / RHD (UK) - Short wheelbase

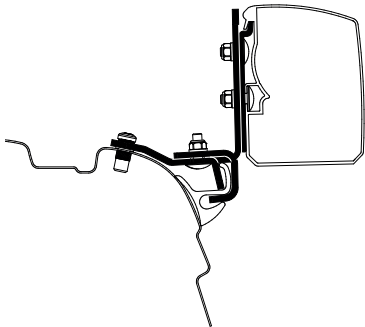

Thule 3200




New

PSA Minivan*

301918 LHD (EU)
301919 RHD (UK)

*Citroën Spacetourer
*Peugeot Traveller
*Toyota Proace
*Pössl Vanster | Campster
*Opel Vivaro > 2019

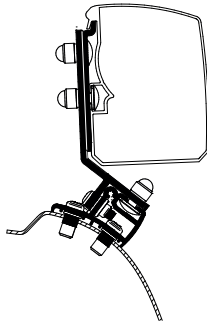

Thule 3200



New

Adapters for wall-mounted awnings

MINIVAN + THULE 3200


Ford Transit/Tourneo Custom

301920 LHD (EU)

301921 RHD (UK)

NOTE: short wheelbase \geq 2013

New

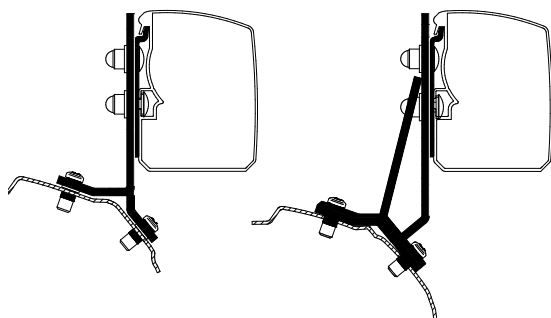

Thule 3200

Trafic/Vivaro/Talento/NV300*

301922

NOTE: short & long wheelbase

*Renault Trafic > 2015


*Opel Vivaro 2015-2019

*Fiat Talento > 2015

*Nissan NV300 > 2015



New

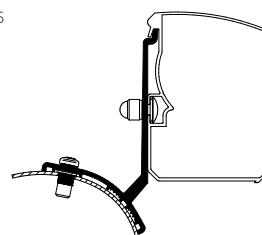

Thule 3200

Adapters for wall-mounted awnings


AWNING PACKS

VW T5/T6



Thule Omnistor 5102 awning + adapter included

309851	2.60 m anthracite 31 - LHD (EU)
309852	2.60 m grey 31 - LHD (EU)
308988	2.60 m anthracite 31 - RHD (UK)
308885	2.60 m grey 04 - RHD (UK)

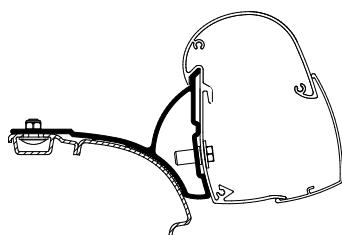


VW T5/T6 (without rail)



Thule Omnistor 4900 awning + adapter included

301772	2.60 m anthracite 31 - LHD (EU)
301773	3.00 m anthracite 31 - LHD (EU)
301774	2.60 m anthracite 31 - RHD (UK)
301775	3.00 m anthracite 31 - RHD (UK)

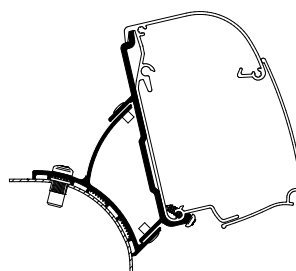


VW T5/T6 Reimo Multirail



Thule Omnistor 4900 awning + adapter + rain gutter included

301410	2.60 m anthracite 31 - LHD (EU)
301420	3.00 m anthracite 31 - LHD (EU)
301411	2.60 m anthracite 31 - RHD (UK)
301421	3.00 m anthracite 31 - RHD (UK)

NOTE: Reimo exclusivity

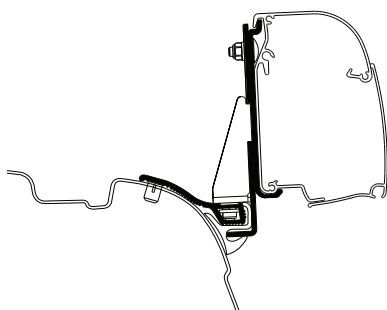


Ford Transit/Tourneo Custom



Thule Omnistor 4900 awning + adapter included

301776	2.60 m anthracite 31 - LHD (EU)
301777	2.60 m anthracite 31 - RHD (UK)

NOTE: short wheelbase \geq 2013

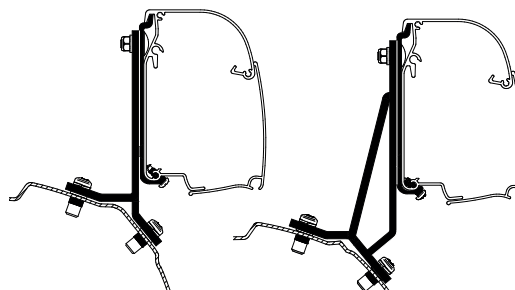

PSA Minivan Adapter*



Thule Omnistor 4900 awning + adapter included

301769	2.60 m anthracite 31 - LHD (EU)
301770	2.60 m anthracite 31 - RHD (UK)


*Citroën Spacetourer

*Peugeot Traveller

*Toyota Proace

*Pössl Vanster | Campster

*Opel Vivaro > 2019

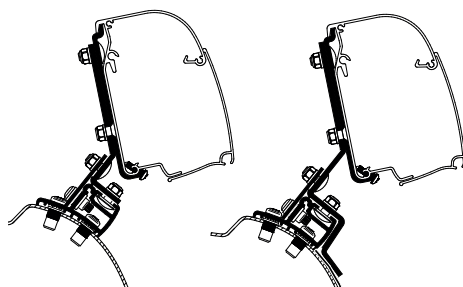


Adapters for roof-mounted awnings

UNIVERSAL

Flat Roof



308097	3.00 m
308098	3.50 m
308099	4.00 m
308100	5.50 m
306799	6.00 m

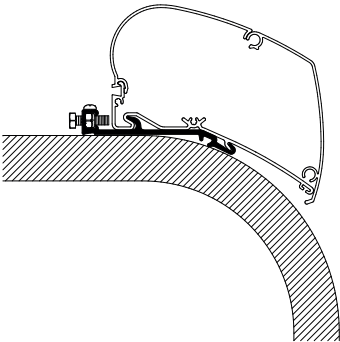


Thule Omnistor: 9200 / 6300 / 6200

Installation profiles



308054	Set: 2x mounting rails + Adapter
308055	Set: 3x mounting rails + Adapter

Awnings	≤ 3.50 m: 1x 308054
Awnings	3.75 m - 4.50 m: 1x 308055
Awnings	≥ 5.00 m: 2x 308054

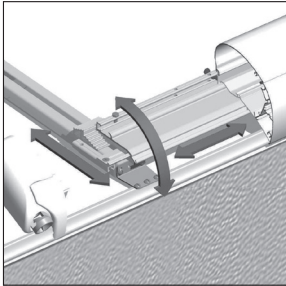


Thule Omnistor: 9200 / 6300 / 6200

Roof Top



308299	Set: 2x 27 cm + 2x 50 cm
--------	--------------------------

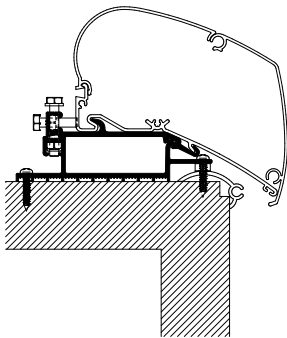

Thule Omnistor: 9200 / 6300 / 6200


Adapters for roof-mounted awnings

MANUFACTURER MOTORHOME

Autosleepers 2013



306794	3.00 m
306795	3.50 m
306796	4.00 m
306797	5.00 m

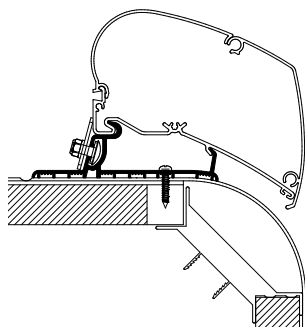


Thule Omnistor: 9200 / 6300 / 6200

Carthago Chic < 2014



309892	3.50 m
309888	4.00 m
309889	4.50 m
309890	5.00 m
309891	5.50 m

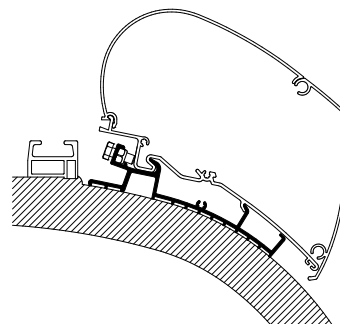


Thule Omnistor: 9200 / 6300 / 6200

Carthago C-Line ≥ 2014



307250	3.50 m
307251	4.00 m
307252	4.50 m
307253	5.00 m
307254	5.50 m
301439	6.00 m

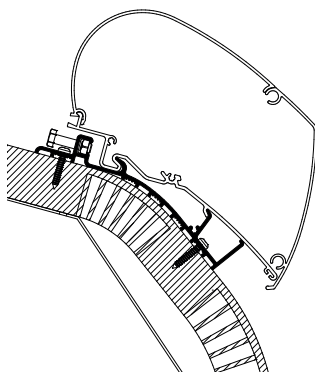


Thule Omnistor: 9200 / 6300 / 6200

Carthago Malibu



308078	3.50 m
308079	4.00 m
301417	4.50 m
301418	5.00 m

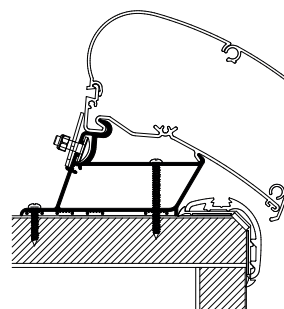


Thule Omnistor: 9200 / 6300 / 6200

Esterel



308110	4.00 m
--------	--------

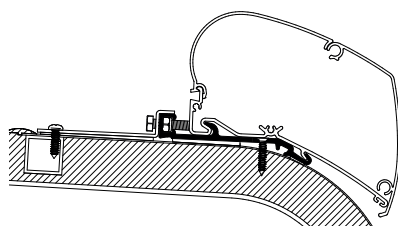


Thule Omnistor: 9200 / 6300 / 6200

Giottiline



308107	Set: 2x 10 cm + 2x 40 cm
--------	--------------------------

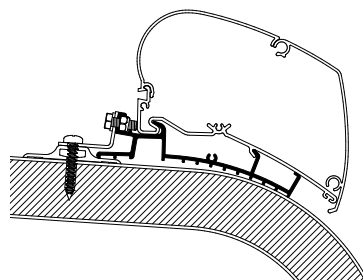


Thule Omnistor: 9200 / 6300 / 6200

Adapters for roof-mounted awnings

MANUFACTURER MOTORHOME

Hobby Optima Deluxe/Premium LED

301902 Set: 2x 27 cm + 2x 50 cm

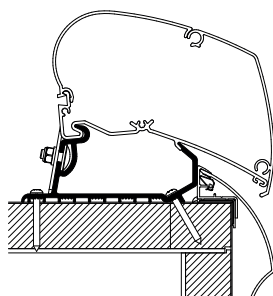

New


Thule Omnistor: 9200 / 6300 / 6200

Hymer SX



308087	3.50 m
308088	4.00 m
308089	4.50 m
308090	5.00 m
308091	5.50 m
306800	6.00 m

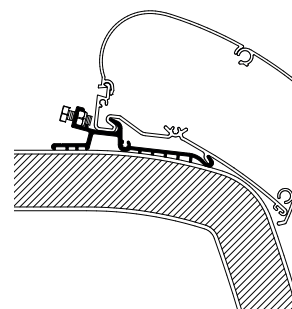


Thule Omnistor: 9200 / 6300 / 6200

Hymer 2013



306951	3.50 m
306952	4.00 m
306953	4.50 m
306954	5.00 m
306955	5.50 m
306956	6.00 m

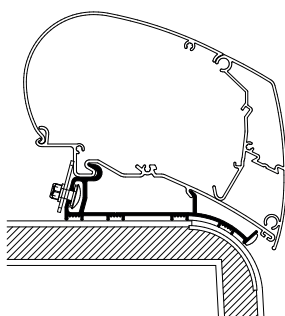


Thule Omnistor: 9200 / 6300 / 6200

LMC Liberty TI/TEC



307042	3.00 m
307043	3.50 m
307044	3.75 m
307045	4.00 m
307046	4.50 m
307049	5.00 m
307047	5.50 m
307048	6.00 m

+ Bürstner Aviano 2016

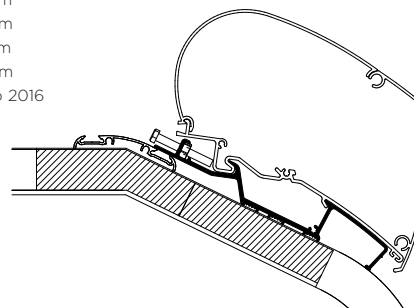


Thule Omnistor: 9200 / 6300 / 6200

LMC Explorer - Cruiser MJ2018



301473	3.50 m
301474	4.00 m
301475	4.50 m
301480	5.00 m
301476	5.50 m

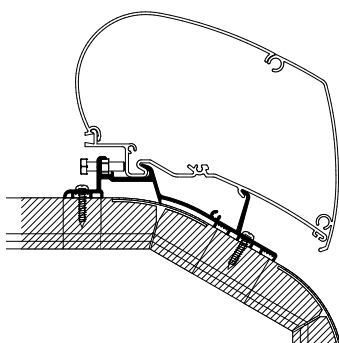


Thule Omnistor: 9200 / 6300 / 6200

Niesmann Smove



301423	Model 6.9B/Q - 3.00 m
301424	Model 7.4B/E - 3.50 m

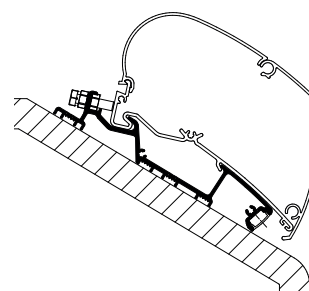


Thule Omnistor: 6300 / 6200

Adapters for roof-mounted awnings

MANUFACTURER MOTORHOME

Rapido Distinction


- 309944 4.50 m
- 301764 5.00 m
- 301765 6.00 m

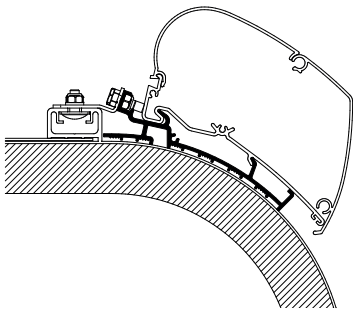

Thule Omnistor: 9200 / 6300 / 6200

Swift Escape 2017

- 301412 Model 604/695 - 3.00 m
- 301413 Model 622/614/664/685 - 3.50 m
- 301414 Model 674/684/694 - 4.25 m

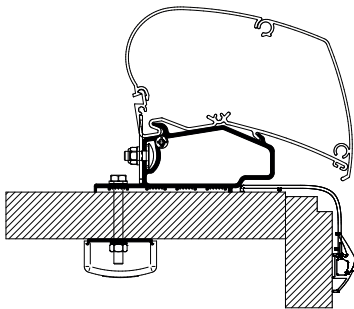


Thule Omnistor: 9200 / 6300 / 6200

Adapters for roof-mounted awnings

MANUFACTURER CARAVAN

Adria Caravan ≥ 2015

309982 Set: 2x 50 cm + 2x 27 cm

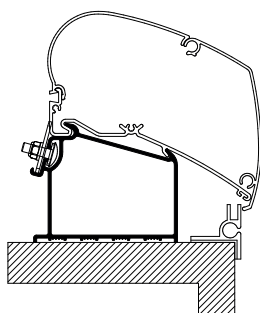


Thule Omnistor: 9200 / 6300 / 6200



Caravan Roof Adapter

306757	Set: 3x 1.00 m
309957	3.00 m
309962	3.25 m
309958	3.50 m
309963	3.75 m
306807	4.00 m
309964	4.25 m
306809	4.50 m
307132	5.00 m
307133	5.50 m
309959	6.00 m

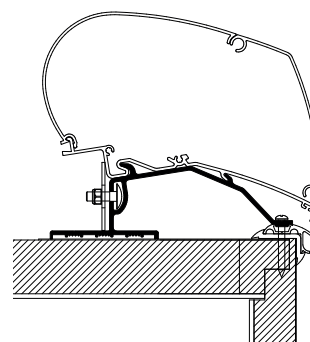


Fits Thule Omnistor Awnings on different vehicle brands:
 Fendt, Dethleffs, LMC*, Trigano: 9200 / 6300 / 6200
 *Extra fixation: LMC Caravan Kit 307064



Eriba Nova 2020

301906	4.25 m
301907	4.50 m
301908	5.00 m

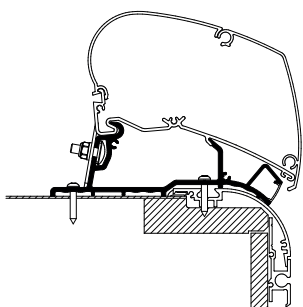


Thule Omnistor: 6300 / 6200


New

Eriba Touring 820

301682 5.00 m

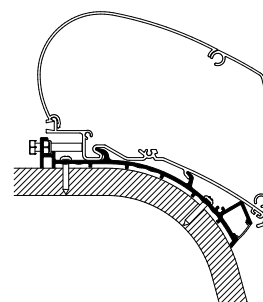


Thule Omnistor: 9200 / 6300 / 6200


New

Eriba Touring > 2008

Adapter + LED

307392	2.80 m Triton
307391	3.25 m Troll

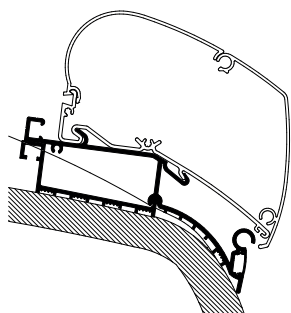
NOTE: Exclusively via Hymer Eriba Touring Dealer


Thule Omnistor: 6300 / 6200



Fendt Brilliant

309692 Set: 2x 11.5 cm + 1x 27 cm + 1x 50 cm (< 4.50 m)

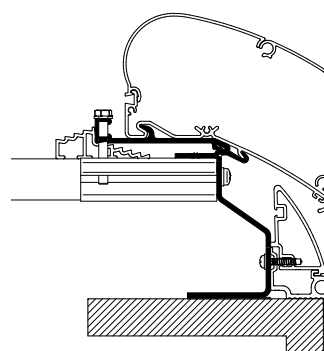

Thule Omnistor: 9200 / 6300 / 6200




Adapters for roof-mounted awnings

MANUFACTURER CARAVAN

Fendt Split Roof


- 301437 3.00 m
- 301438 3.50 m
- 309913 4.00 m
- 309914 4.50 m

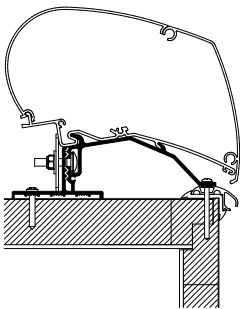

Thule Omnistor: 9200 / 6300 / 6200

Hobby Caravan 2009


- 308663 Set: 2x 27 cm + 2x 50 cm

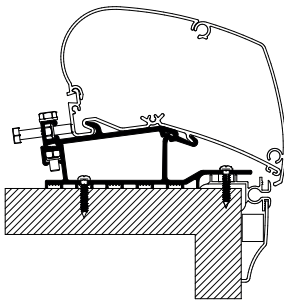

Thule Omnistor: 9200 / 6300 / 6200

Hobby Caravan ≥ 2014


- 306948 Set: 2x 60 cm + 2x 27 cm

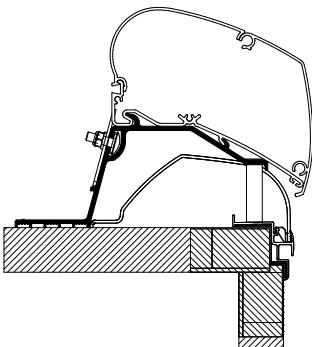

Thule Omnistor: 9200 / 6300 / 6200

Hobby Premium & Ontour


- 309819 Set: 2x 27 cm + 2x 50 cm

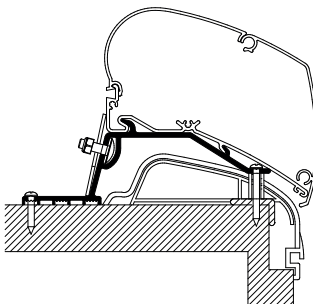

Thule Omnistor: 9200 / 6300 / 6200

Hymer 2013 Nova Roof


- 306951 3.50 m
- 306952 4.00 m
- 306953 4.50 m
- 306954 5.00 m
- 306955 5.50 m
- 306956 6.00 m

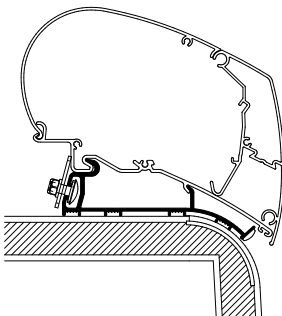

Thule Omnistor: 9200 / 6300 / 6200

LMC Caravan Roof Adapter Kit

- 307064

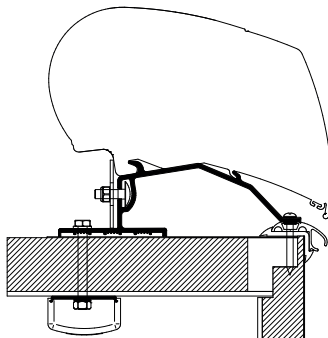

Thule Omnistor: 9200 / 6300 / 6200


Adapters for roof-mounted awnings

VAN

Ducato | Jumper | Boxer 1994-2006



Adapter + EPDM
308058

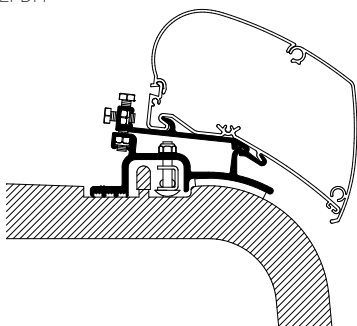


Thule Omnistor: 6300 / 6200

Ducato | Jumper | Boxer > 2007



Adapter + EPDM + adapter covers
301649 Set: 2x 27 cm + 1x 10 cm (L2H2 3.25 m)
301650 Set: 2x 27 cm + 2x 10 cm (L3H2 3.75 m | L4H2 4.00 m)

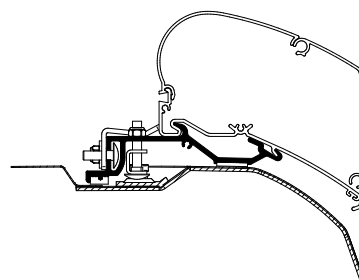


Thule Omnistor: 6300 / 6200

Mercedes Sprinter > 2007 | VW Crafter 2007-2016



308073

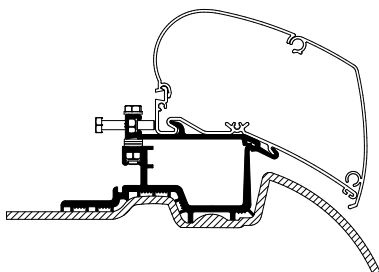


Thule Omnistor: 6300 / 6200

Mercedes Sprinter > 2007 | VW Crafter 2007-2016 - OE Track



301668

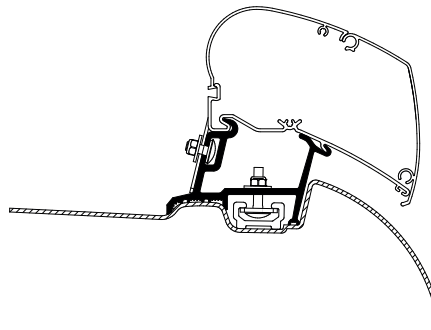


Thule Omnistor: 6300 / 6200

VW Crafter > 2017 | MAN TGE



Adapter + EPDM + adapter covers
301768 Set: 3x 40 cm - LHD (EU)
301771 Set: 3x 40 cm - RHD (UK)
NOTE: compatible with L3H3 / L4H3 / L5H3
Not possible to mount on
the pre-installed rails of VW

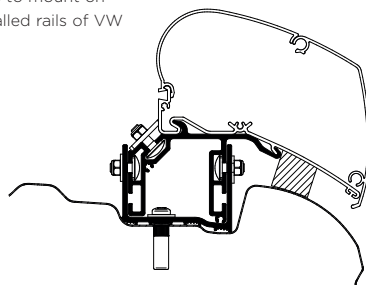


Thule Omnistor: 6300 / 6200

Renault Master | Opel Movano 1998-2010



308059

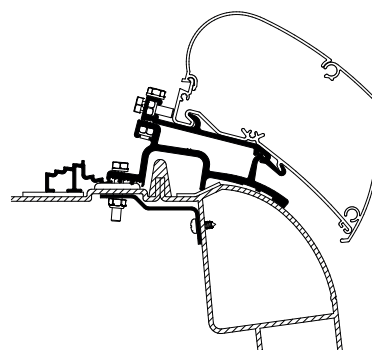

Thule Omnistor: 6300 / 6200


Adapters for roof-mounted awnings

VAN

Renault Master | Opel Movano
≥ 2011





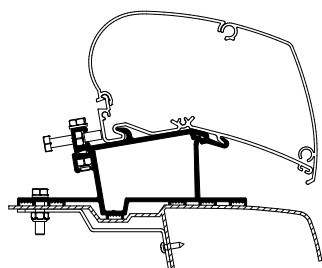


308959 Set: 2x 11.50 cm + 2x 2.70 cm





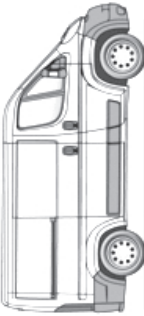

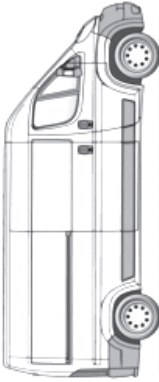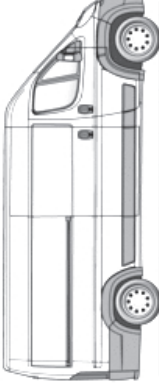



Thule Omnistor: 6300 / 6200

Adapters for vans










Fiat Ducato – Peugeot Boxer – Citroën Jumper				
	C	M	L	XL
	L1 (4963mm)	L2 (5413mm)	L3 (5998mm)	L4 (6363mm)
H1 (2254mm)	 <p>Wheel awning 2.60 m - 308659*</p>			
H2 (2524mm)	 <p>- Roof awning 2.60 m - 301649 - Wall awning 2.60 m (Ducato H2 Lift Roof) - 308960</p>	 <p>- Roof awning 3.25m - 301649 - Wall awning 3.00 m (Ducato H2 Lift Roof) - 308960 - In case of roof rack - 301651</p>	 <p>- Roof awning 3.75 m - 301650 - Wall awning 3.50 m (Ducato H2 Lift Roof) - 308960 - In case of roof rack - 301652</p>	 <p>- Roof awning 4.00 m - 301650 - Wall awning 4.00 m (Ducato H2 Lift Roof) - 308960 - In case of roof rack - 301652</p>
H3 (2764mm)	<p>wheel base 3000 awning length 2.60 m</p>	<p>wheel base 3450 awning length 3.00 - 3.25 m</p>	<p>wheel base 4035 awning length 3.50 - 3.75 m</p>	<p>wheel base 4035 XL awning length 4.00 m</p>

* Fits only with awning TO 5102

Adapters for vans







Renault Master - Opel Movano				
	C	M	L	XL
	L1 (5048mm)	L2 (5548mm)	L3 (6198mm)	L4 (6848mm)
H1 (2307mm)				
H2 (2500-2549mm)		 Roof awning 3.25 m - 308959	 Roof awning 3.75 m - 308959	 Roof awning 4.00 m - 308959
H3 (2744-2815mm)		 Wall awning 3.00 m - 308072	 Wall awning 3.50 m - 308072	 Wall awning 4.00 m - 308072
wheel base 3182		wheel base 3682	wheel base 4332	wheel base 4332 XL

Adapters for vans

Mercedes Sprinter > 2007 - VW Crafter 2007-2016				
	C	M	L	XL
	L1 (5245mm)	L2 (5910mm)	L3 (6945mm)	L4 (7345mm)
H1 (2435-2530mm)				
H2 (2720-2820mm)		 - Roof awning 3,25 m - 308073 - In case of OE Track - 301668	 - Roof awning 4,25 m - 308073 - In case of OE Track - 301668	 - Roof awning 4,50 m - 308073 - In case of OE Track - 301668
H3 (3045-3055mm)				
	wheel base 3250	wheel base 3665	wheel base 4325	wheel base 4325 XL

NOTE : Adapter 308073 is not compatible with VW Crafter models as from 2017

Adapters for vans

VW Crafter 2017				
	M	L	XL	
	L3 (5986 mm)	L4 (6836 mm)	L5 (7391 mm)	
H2 (2355 mm)				
H3 (2590 mm)	 roof awning 3.25 m 301768 (LHD) - 301771 (RHD)	 roof awning 4.00 m 301768 (LHD) - 301771 (RHD)	 roof awning 4.50 m 301768 (LHD) - 301771 (RHD)	
H4 (2798 mm)				
	wheel base 3640 mm	wheel base 4490 mm	wheel base 4490 mm	