



INSTALLATION

> Instructions

Thule Adapter Wall - Ford Transit Custom V710 Fixed T4200

302946 - 302947

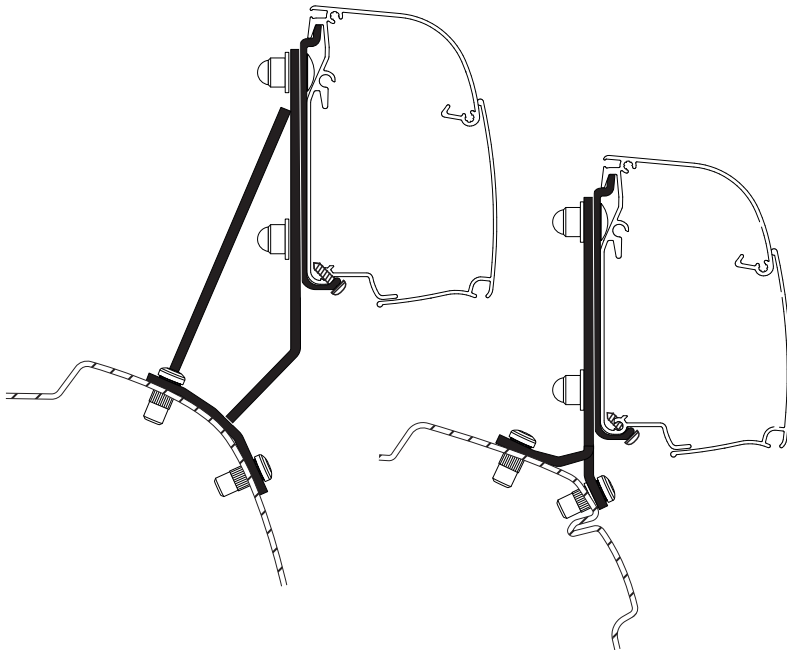

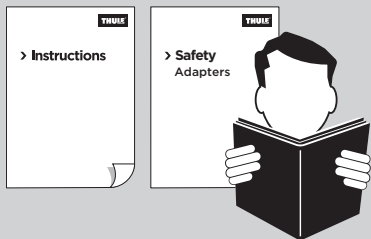

DE Adapter - Anleitung
NL Adapter - Instructies
FR Adaptateur - Instructions
IT Adattatore - Istruzioni
ES Adaptador - Instrucciones
SV Adapter - Instruktioner
FI Adapteri - Ohjeet
DA Adapter - Instruktøner
NO Adapter - Instruksjoner

PL Adapter - Instrukcje
PT Adaptador - Instruções
CS Adaptér - Návod
SL Adapter - Navodila
TR Adaptör - Talimatlar
ZH 适配器 - 说明
JA アダプター - 取扱説明書
KO 어댑터 - 지침

1 WARNINGS & INFO

4

Warnungen & Infos / Waarschuwingen & info / Avertissements & informations / Avvertenze & informazioni / Advertencias & información / Varningar & information / Varoituksia & tietoja / Advarsler & info / Advarsler & information / Ostrzeżenia & informacje / Avisos e informações / Varování a informace / Opozorila in informacije / Uyarılar ve Bilgiler / 警告和信息 / 警告と情報 / 경고 및 정보

3 FITGUIDE

5

Kaufhilfe / Koopgids / Guide de sélection / Guida alla scelta / Guía de ajuste / Storleksguide / Valintaopas / Tilpasningsguide / Tilpasningsveiledning / Przewodnik Fit Guide / Guia de compatibilidade / Průvodce velikostmi / Fitguide / Takma Kilavuzu / 选配指南 / フィッティングガイド / 장착 가이드

2 CONTENT

5

Inhalt / Inhoudsopgave / Sommaire / Contenuto / Contenido / Innehåll / Sisälllys / Indhold / Innhold / Treść / Índice / Obsah / Kazalo / İçerik / 目录 / 目次 / 목차

4 TOOLS

6




Werkzeuge / Gereedschappen / Outils / Strumenti / Herramientas / Verktøy / Työkalut / Værktøj / Verktøy / Narzędzia / Ferramentas / Nářadí / Orodja / Aletler / 工具 / ツール / 도구

5 INSTALLATION

7

Montage / Installatie / Installation / Installazione / Instalación / Montering / Asennus / Montering / Montering / Montaż / Instalação / Montáž / Namestitev / Montaj / 安装 / 取り付け / 설치





1 WARNINGS & INFO

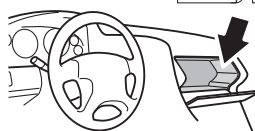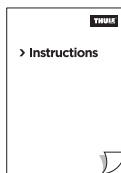

OK





NOT OK

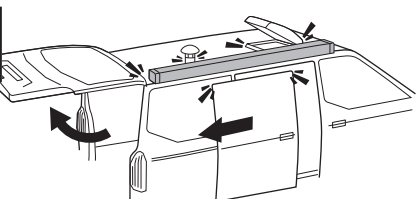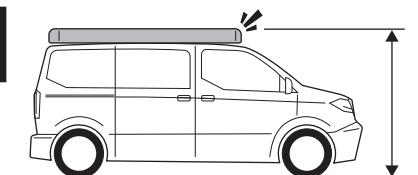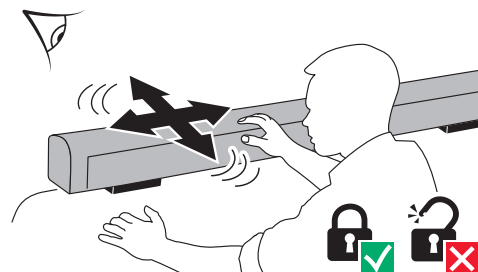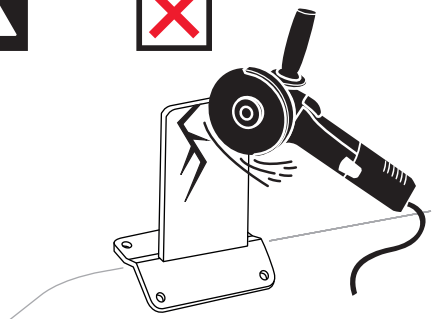

2 FITGUIDE

BRAND	MODEL	ADAPTER	AWNING
Ford	Transit Custom V710 L1 LHD	302946	T 4200 - 2.60 m
	Tourneo Custom V710 L1 LHD		
	Transit Custom V710 L1 RHD	302947	
	Tourneo Custom V710 L1 RHD		
	Transit Custom V710 L2 LHD	302946	T 4200 - 3.00 m
	Tourneo Custom V710 L2 LHD		
	Transit Custom V710 L2 RHD	302947	
	Tourneo Custom V710 L2 RHD		

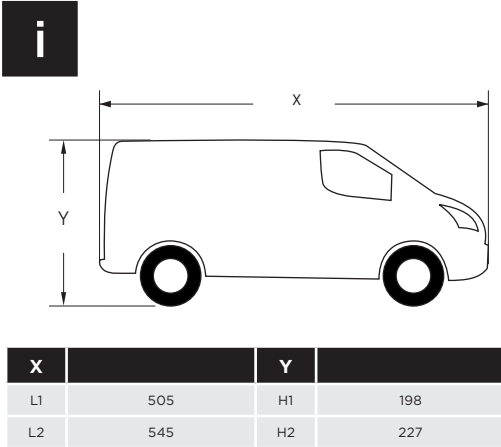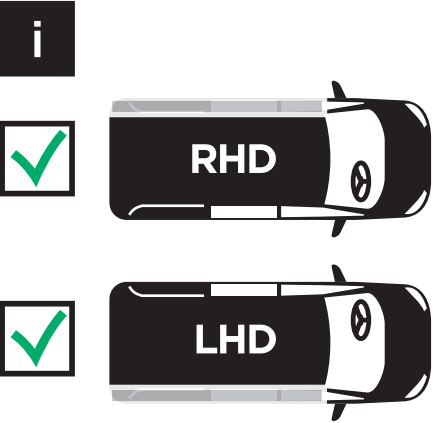

i

ANTI-CORROSION

DEGREASER

SAND PAPER P120

GLUE

GLUE SIKA 552 AT

SEALANT

SEALANT SIKA 522

ACTIVATOR

ACTIVATOR SIKA 205

3 CONTENT



x6
M6 x 18 mm
A2



x8
M6 x 9 x 14 mm
Blind rivet nut



x8
M6
Schnorr - ZN



x4
M6 x 16 mm
A2



x6
M6
A2



x2
M6 x 16 mm
TX30 - A2



x8
M6 x 20 mm
TX30 - A2




x6
M6
Nut cap



x4
4,2 x 16 mm
TX20 - A2




x1

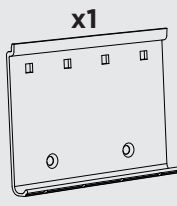


x1

LHD

x1

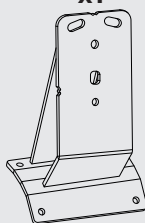


x1

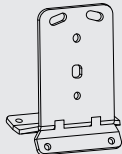


RHD


x1

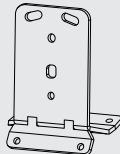

x1

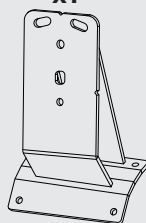


4 TOOLS



Ø 3 mm

Ø 9 mm

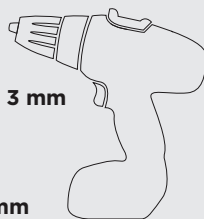

GLUE



TX20




TX30






N° 10

5 INSTALLATION

1

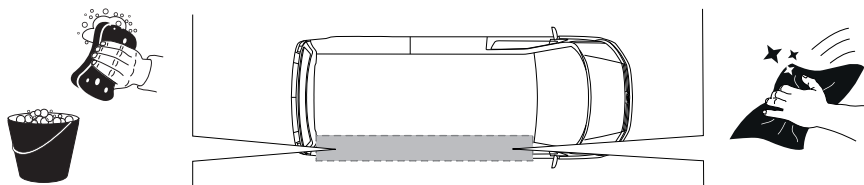


2

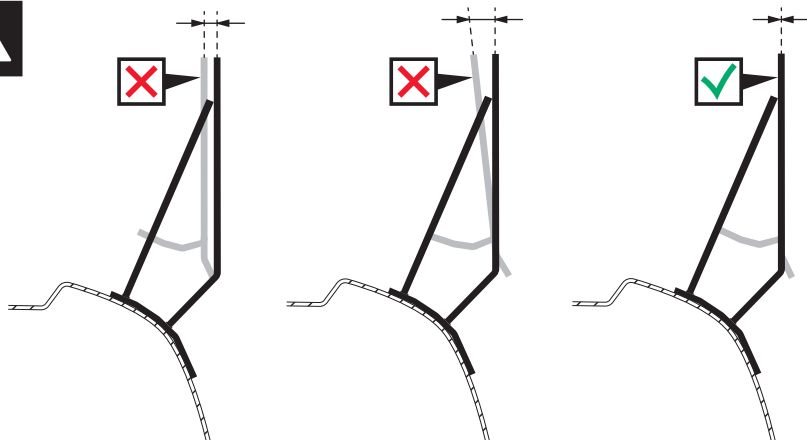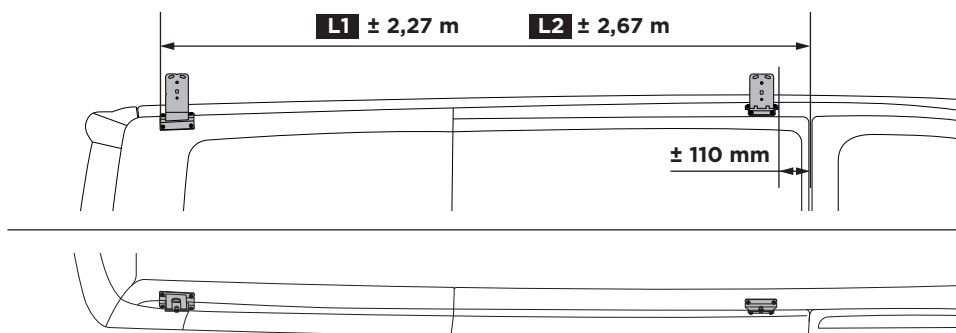


3




A

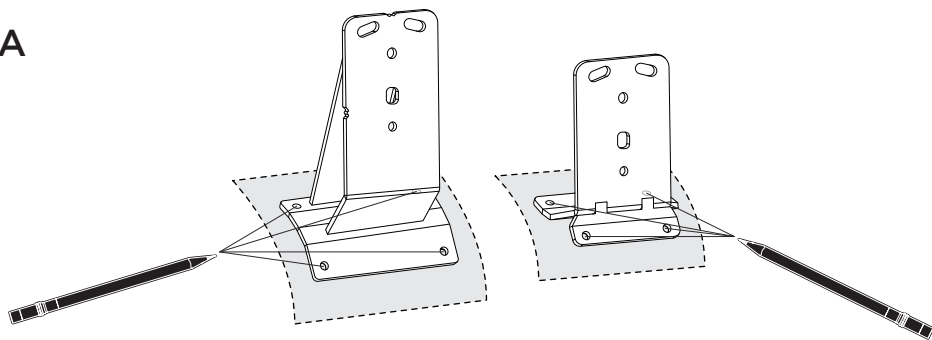


B

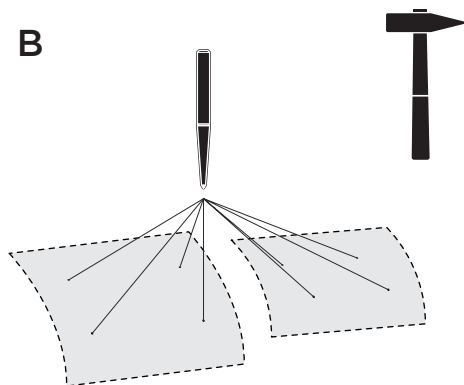


C

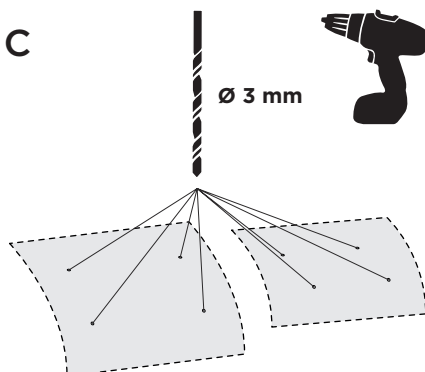

D

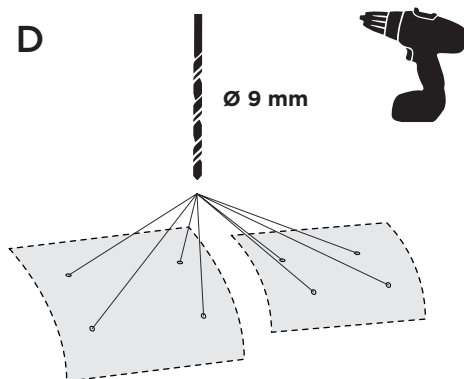


E

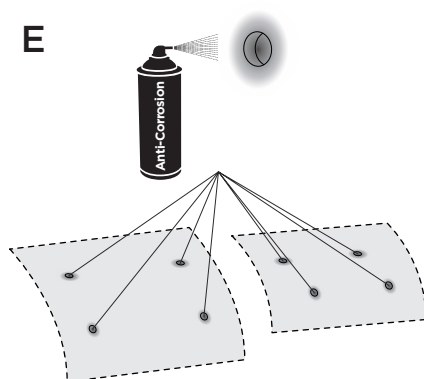


4





x8

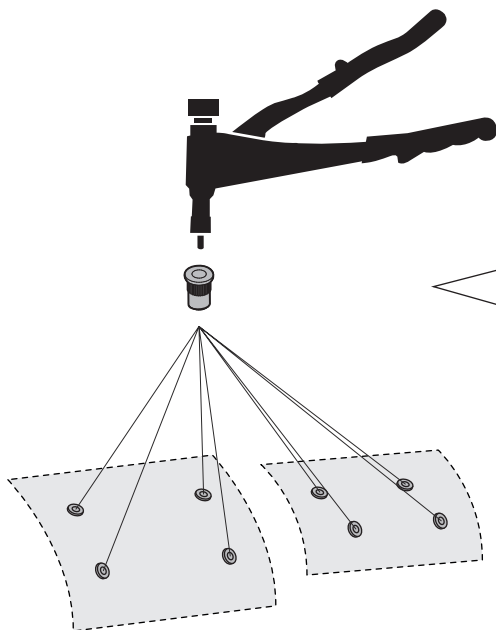


1

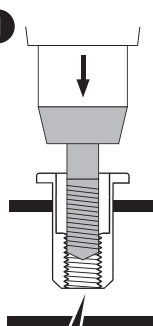

2

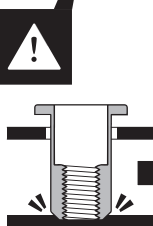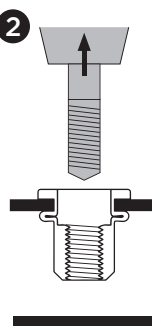



Ø 9 mm

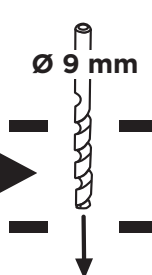



5




A

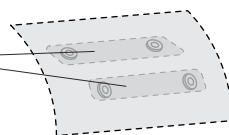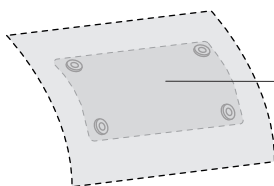


B

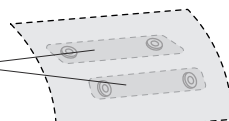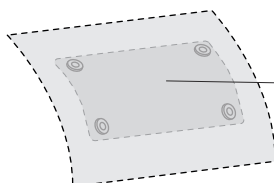

C

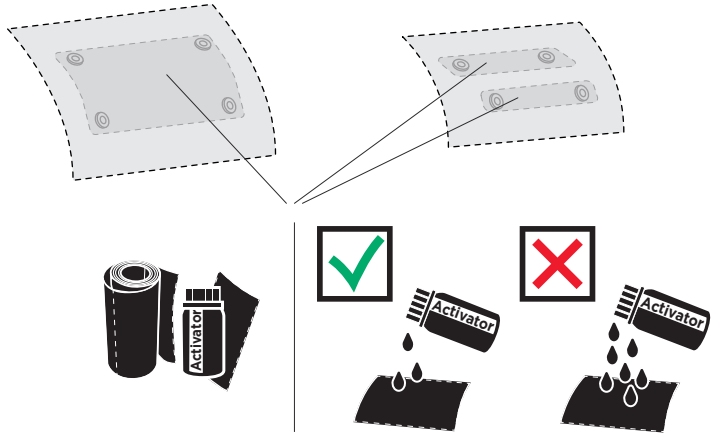


D

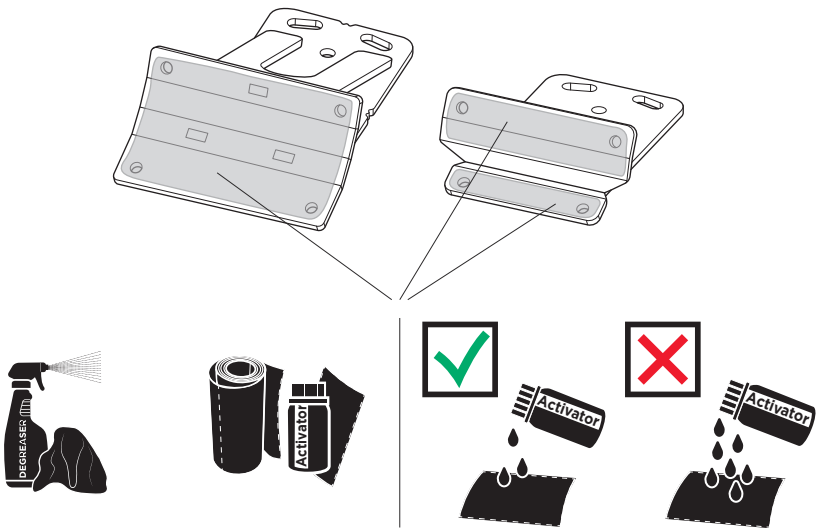



6





A

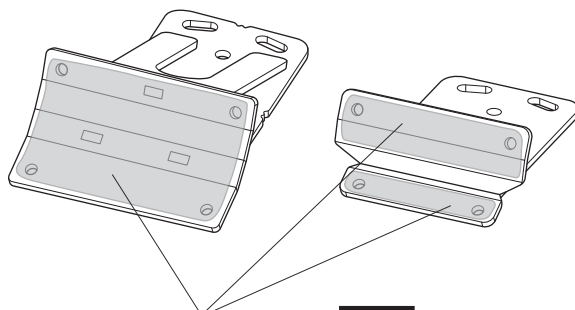


B

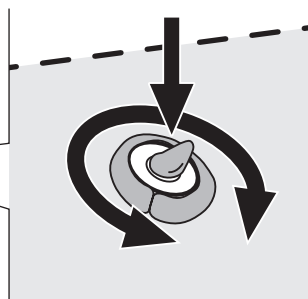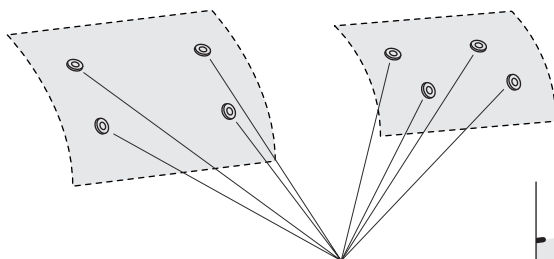




7

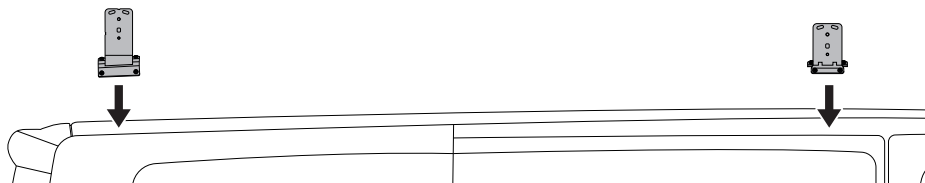


A

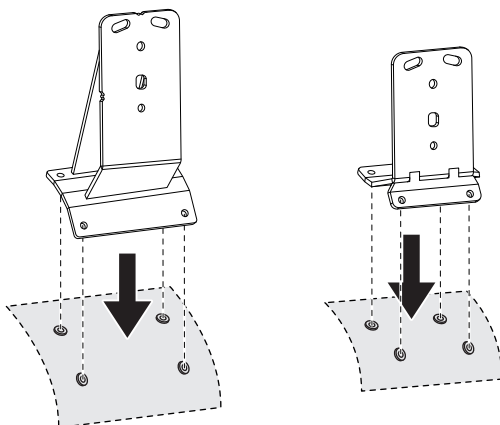


B

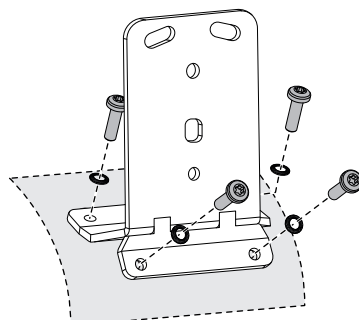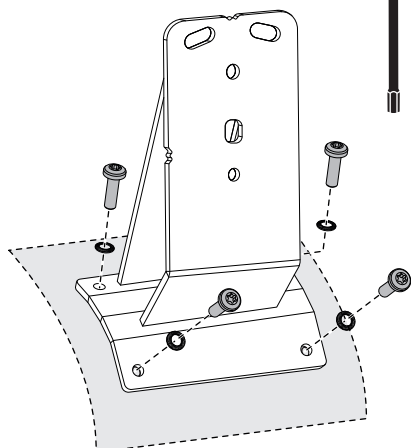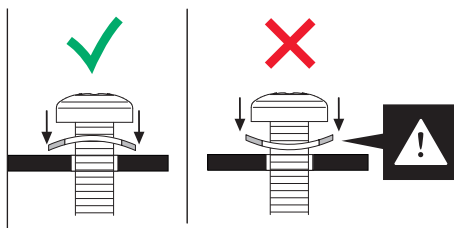



8

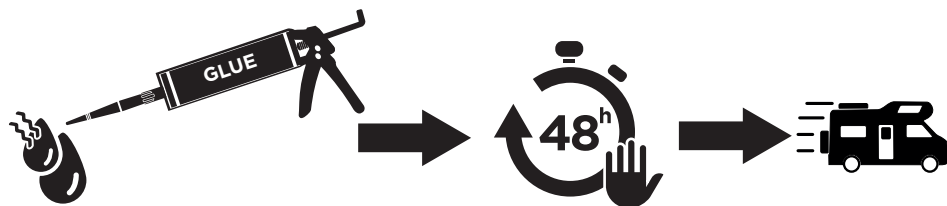




9




6 Nm

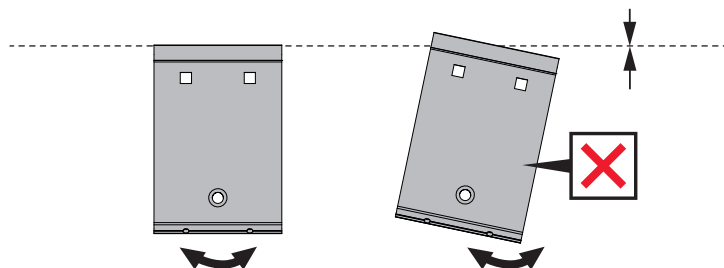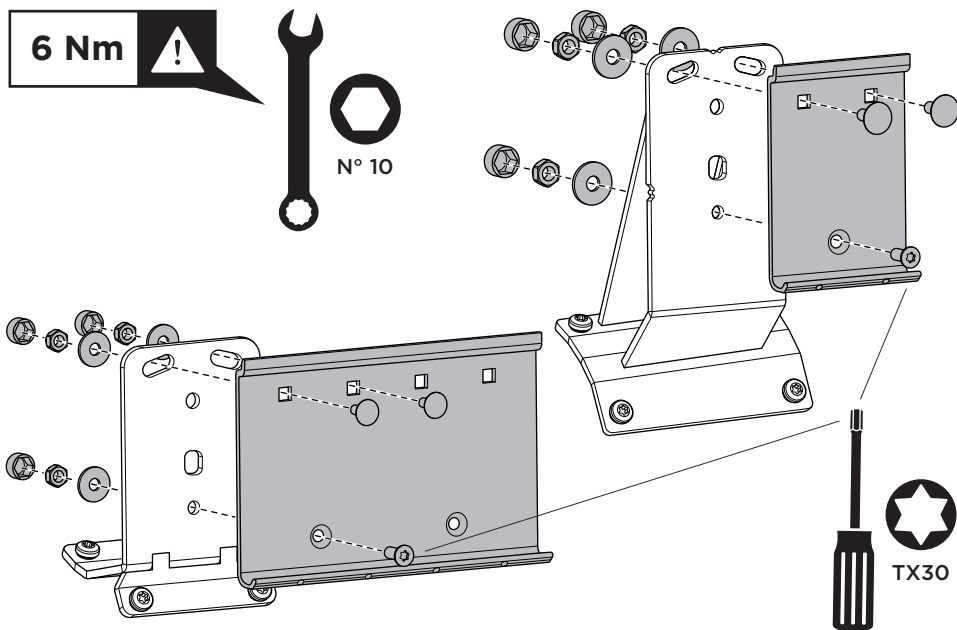


10

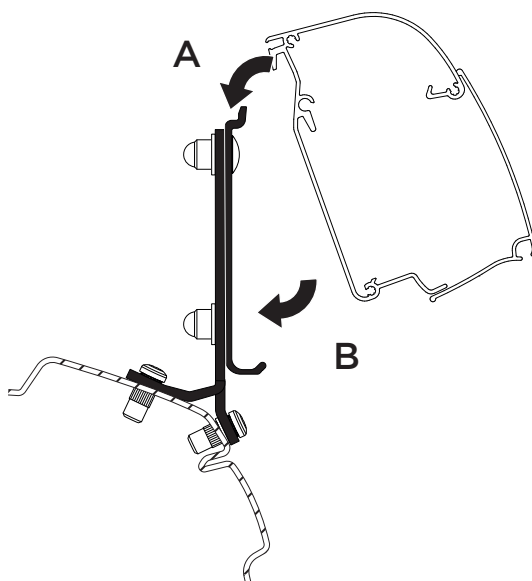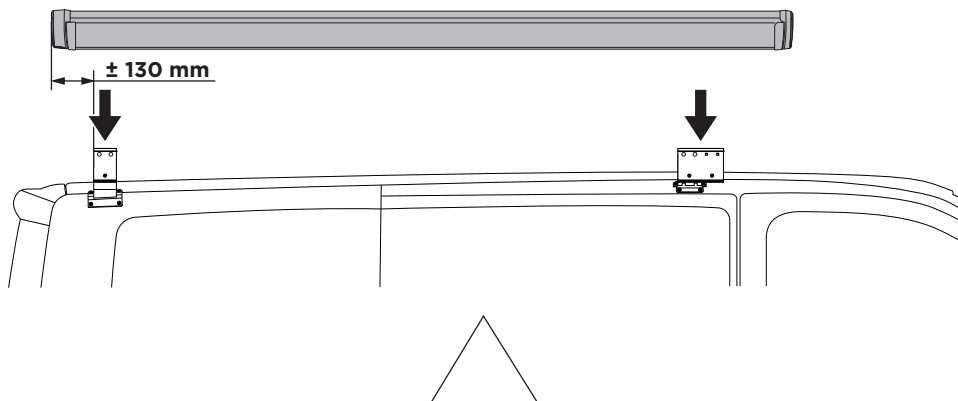

11

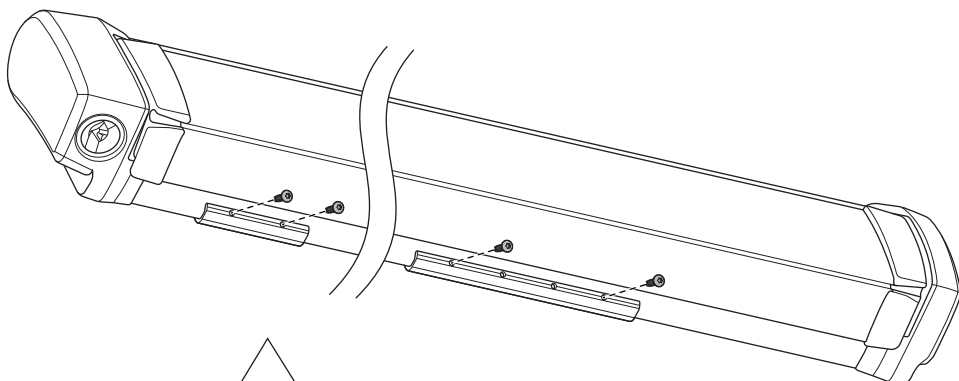

A

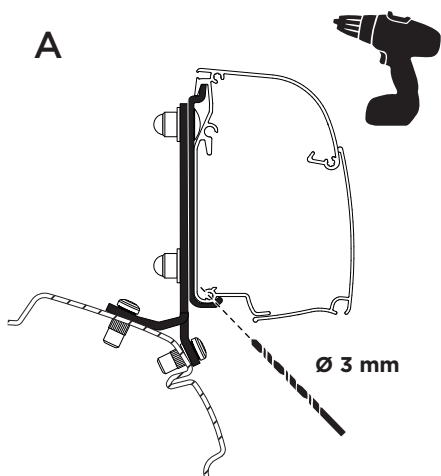

B

